

# Split Wear Plates

Our split wear plates are used on both sides of the carbon buttons so that the head does not act as a wear surface. Therefore, with our design you do not need to replace the head, just the wear plate. The OEM arrangement requires head replacement, which involves removing slotter shafts. Our split wear plates are as easy to replace as a set of knives.

OEM Design  
(requires replacing head)



Sun Automation Group Design  
(only requires replacing wear plate)



SUN Automation Group - 66 Loveton Circle, Sparks, MD 21152  
Phone : 1-800-253-7278 [www.sunautomation.com](http://www.sunautomation.com)